
STAINLESS STEEL URINAL MAINTENANCE





Falcon Waterfree F9000ss Stainless Steel Urinal

NORMAL CLEANING

Clean daily, or on regular restroom cleaning schedule.

RECOMMENDED CLEANING MATERIALS

- Sponge (natural or artificial)
- Soft cloth

RECOMMENDED CLEANING SOLUTIONS*


Please refer to the list of recommended cleaners at http://www.falconwaterfree.com/literature

THINGS TO AVOID

- **Urinal tablets or cakes** (these may stain or ruin stainless steel finish).
- Cleaners that are not recommended by Falcon.
- Chlorinated products (bleach, cleansers or sanitizers) of any kind.
- Harsh chemicals (strong acidic or alkaline materials such as hydrochloric acid, sodium hydroxide, etc.).
- Abrassive polishing cleansers (powders).
- Steel wool, steel utensils, or objects made of steel or metal.
- Abrasive pads, hard brushes, or cloths.
- Never dump cleaning solutions or other liquids into the cartridge.




NORMAL CLEANING

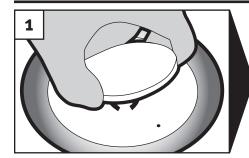

Remove diverter and wipe clean.



Spray (mist) Falcon-recommended* cleaner onto bowl.

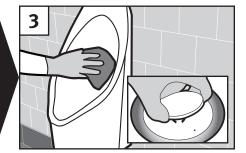

Wipe clean and dry the entire outside and inside of bowl and replace diverter.

FOR TOUGH PROBLEMS

FIRST, REMOVE THE CARTRIDGE FROM THE URINAL AND FLUSH THE HOUSING WITH 5 GALLONS (20 LITERS) OF HOT SOAPY WATER. BE SURE TO HAVE A NEW CARTRIDGE READY, BUT DO NOT INSTALL YET.

TO REMOVE BUILDUP OR RUST:

Use a soft non-abrasive sponge or synthetic general-purpose pad. Apply a creamy paste consisting of baking soda (bicarbonate of soda) and water to the pad and CAREFULLY rub the affected area. Be careful not to scratch polished stainless steel

surfaces, using a gentle circular motion. If cleaning brushed surfaces, rub in the direction of the grain. Rinse surfaces thoroughly immediately after application. Afterwards, using a soft non-abrasive cloth, wipe surfaces with stainless steel cleaner/polish.

To REMOVE STUBBORN STAINS OR TO TREAT A SCRATCH: Use a soft non-abrasive sponge or synthetic general-purpose pad. Apply any of the cleaners listed below to the pad and CAREFULLY rub out spot. Be sure to rub in the direction of the grain on brushed finishes, or in a gentle circular motion on polished finishes.

- #7 chrome polish
- Silver polish
- Commercially available stainless steel cleaners

Afterwards, using a soft non-abrasive cloth, wipe surfaces with stainless steel cleaner/polish.

Wipe clean the inner stainless steel rim then install a new cartridge, following the in-box instructions.

*Falcon-recommended cleaners: www.falconwaterfree.com/literature

Falcon Waterfree Technologies, LLC • 866.275.3718 (toll-free) • Fax: 616.954.3579 • info@falconwaterfree.com • www.falconwaterfree.com